General Maintenance and Awareness Information

At each use or in case of traveling

- Choose a good location for the television, in a clean place, away from heat sources (sun, radiators, fireplace), plants (pollen, dust, water) and the ground (risk of shocks, dust).

At each use

- Do not place cloth, paper, or other materials over the vents on the top, sides, or back of the TV.

At each use

- Turn off the TV after use and unplug it if it will not be used for a long time.

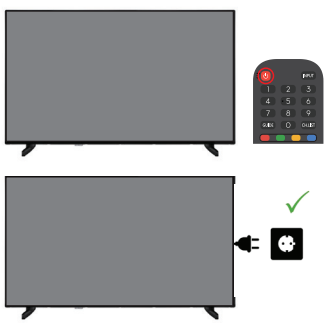

Awareness Information

- Excessive screen use by minors can disrupt their sleep and social relationships. It is crucial to set time limits, encourage offline activities and use parental control tools to monitor screen use and prevent any risk of addiction.
- Cyberbullying can manifest itself through teasing or threats. It is important to be attentive to signs of distress in young people and to promote digital kindness education, while encouraging the reporting of abusive behaviour.
- Young people may be exposed to violent or dangerous content. Installing content filters and regularly discussing risks with young people are essential measures to protect them.

At each use or in case of traveling

- Store the remote control carefully and do not expose it to liquid and regularly check the condition of the remote control batteries to avoid corrosion of the contacts.

Cleaning : once a week
Others : during all life of the product

- Clean the screen with a soft, dry cloth after turning off and unplugging the TV, do not wet the device and avoid window sprays and other household cleaning agents.

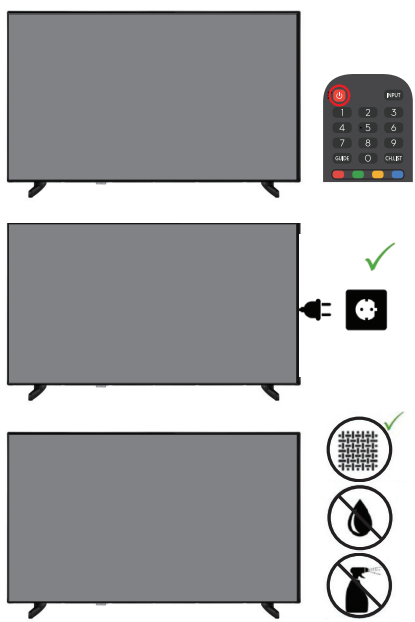

Informations générales sur l'entretien

A chaque utilisation

- Choisir un bon emplacement pour la télévision, dans un endroit propre, à distance de sources de chaleur (soleil, radiateurs, cheminée), de plantes (pollen, poussière, eau) et du sol (risque de chocs, poussière).

Source de chaleur | Pollen | Eau | Choc | Poussière

A chaque utilisation

- Ne pas placer de tissu, de papier ou d'autres matériaux sur les orifices situés sur le dessus, sur les côtés ou à l'arrière du téléviseur.

Tissus | Papier | Objets | Autres matériaux

A chaque absence prolongée

- Éteindre le téléviseur après utilisation et le débrancher en cas d'inutilisation prolongée.

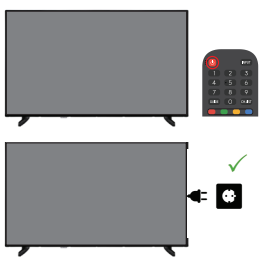

Informations de sensibilisation

- L'usage excessif des écrans par les mineurs peut perturber leur sommeil et leurs relations sociales. Il est crucial de fixer des limites de temps, de favoriser des activités hors ligne et d'utiliser des outils de contrôle parental pour surveiller l'usage des écrans et ainsi prévenir tout risque d'addiction.
- Le cyberharcèlement peut se manifester par des moqueries ou des menaces. Il est important d'être attentif aux signes de détresse chez les jeunes et de promouvoir une éducation à la bienveillance numérique, tout en encourageant le signalement des comportements abusifs.
- Les jeunes peuvent être exposés à des contenus violents ou dangereux. Installer des filtres de contenu et discuter régulièrement des risques avec les jeunes sont des mesures essentielles pour les protéger.

A chaque absence prolongée

- Ranger soigneusement la télécommande et ne pas l'exposer à un liquide et vérifier régulièrement l'état des piles de la télécommande pour éviter la corrosion des contacts.

Tous les mois :
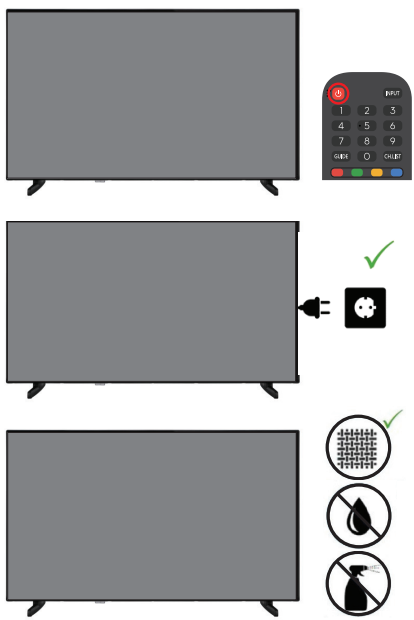
- Nettoyer l'écran avec un chiffon doux et sec après avoir éteint et débranché le téléviseur, ne pas mouiller l'appareil et éviter les sprays à vitre et autres agents d'entretien domestique.